


BALLAST BYPASS ONLY
S23880 / S23840 / S23830 / S23820 / S13824 / S13860 / S13844 / SS13800


Installation Instructions for HO T8 LED SIGN TUBES

EXISTING

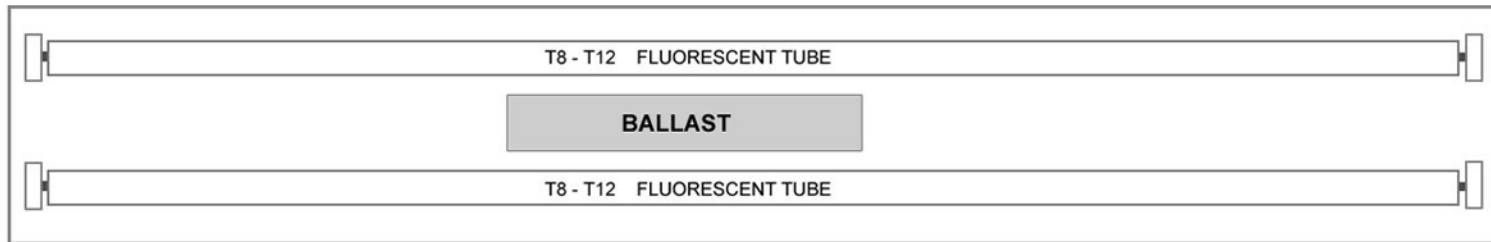

Leave ballast in place if desired but make sure it is disconnected from mains

RETROFIT

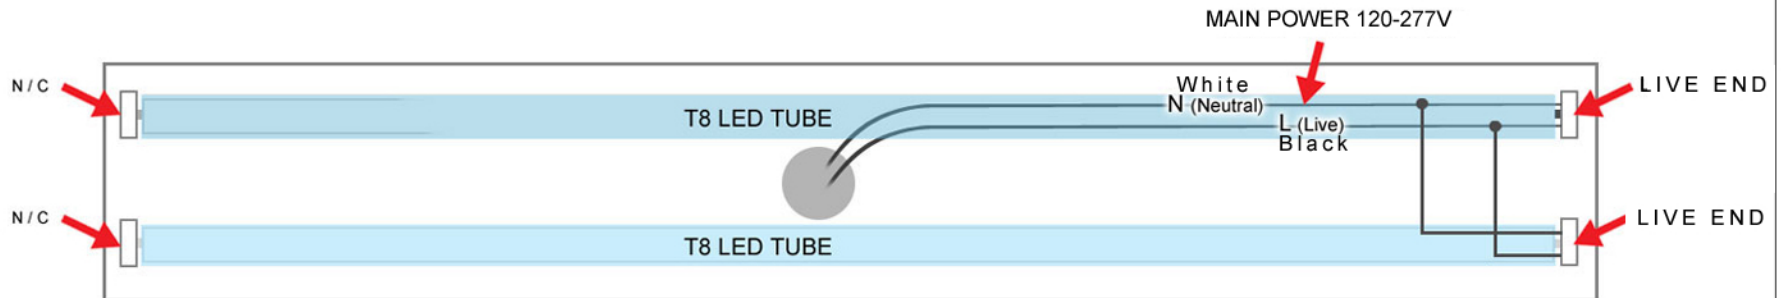

STEPS:

1. Disconnect main power.
2. Disconnect and remove existing ballast.
3. Connect AC straight power 120-277V to the lamp socket as per diagram.