


BALLAST BYPASS ONLY

T84128 / T84143 / T84075 / T84077 / T84050 / T84051


Installation Instructions for 4' & 8' HO or Bi-Pin T8 LED Tubes

EXISTING

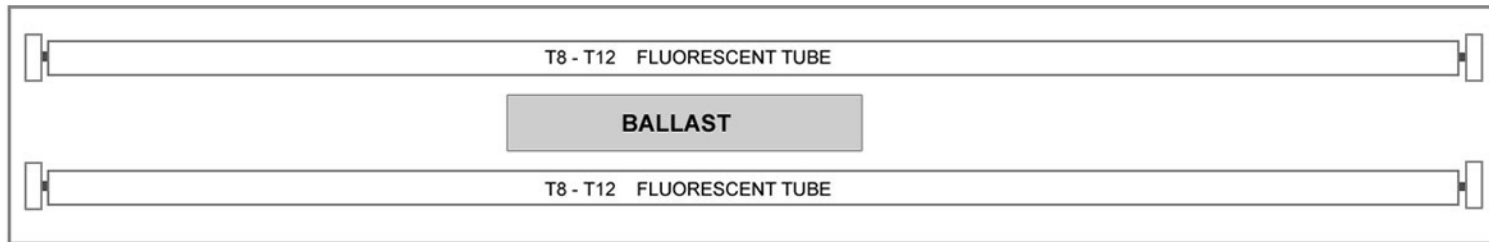

Leave ballast in place if desired but make sure it is disconnected from mains

RETROFIT

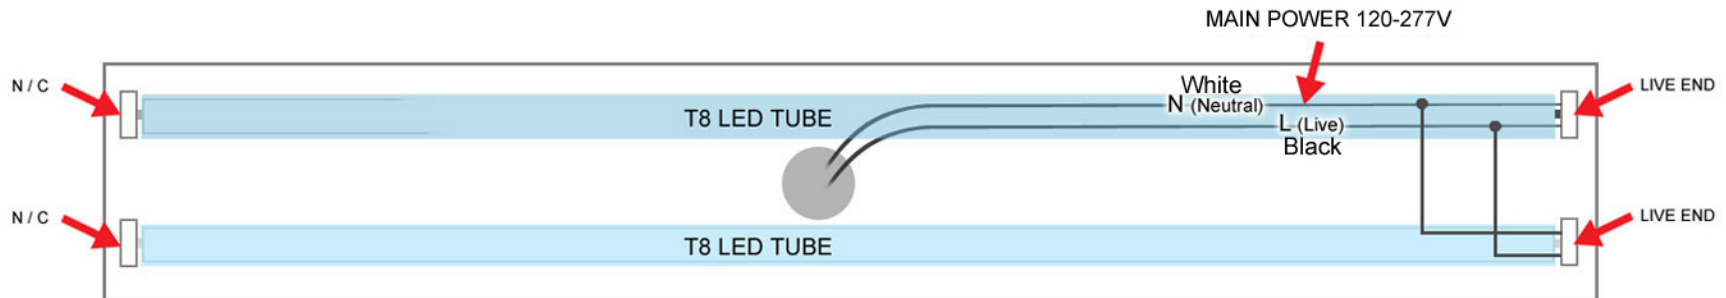

STEPS:

1. Disconnect main power.
2. Disconnect and remove existing ballast.
3. Connect AC straight power 120-277V to the lamp socket as per diagram.
4. For BI-PIN T8's use unshunted tombstones.

IMPORTANT LIVE END:
Use unshunted lamp socket
for Bi-Pin installation